 



Pet Two-in-one Water Dispenser

Operation Instruction

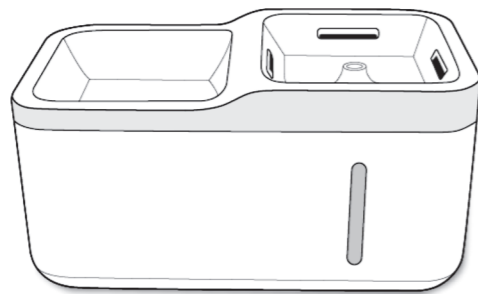

(Please read this manual carefully before use)

 Product introduction

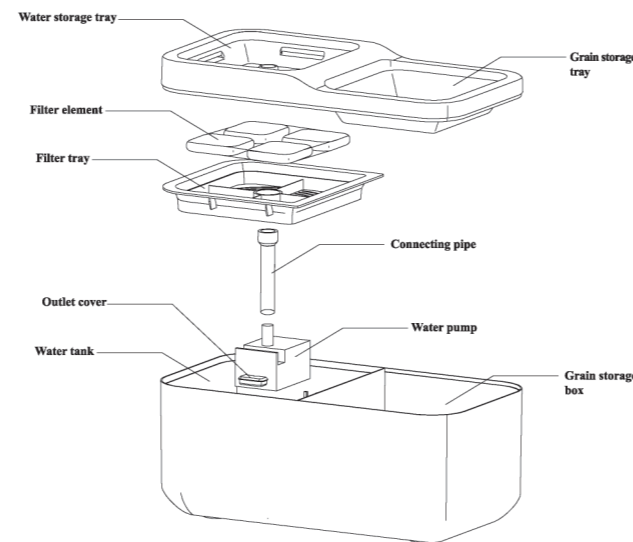

Remarks: All pictures in this manual are for reference only, and the products are subject to the real ones.

Product Specification

Name: Pet Two-in-one Water Dispenser

Product dimensions: 268*144*132 mm

Type: MGM-0002

Material: ABS

Input parameters: DC-5V-0.1A


Rated power: 0.3-1W

Product capacity: 1.5L


Net weight: about 0.62kg

Installation and use

1. Please take out all product accessories from the package and clean them before use.
2. Pass the USB cable of the water pump through the outlet as shown in the figure below, clamp the cable in the groove, then clamp the transparent cover to the outlet, and fix the LED lamp in the clamping groove at the bottom of the water tank towards the water level observation port; Plug the small hose into the water pump and fill it with 1.5L of clean drinking water.

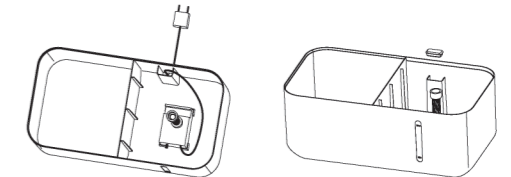


3. Put the filter tray on the right position, put in the filter element, cover the water storage cover, and connect the power adapter with USB.

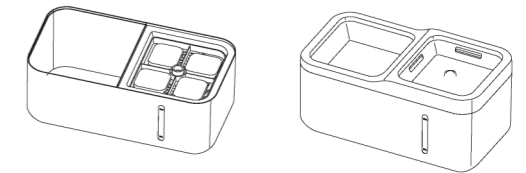

Power on and use

1. Plug the USB interface power cord into the adapter DC 5V, then plug the adapter into the AC 110-220 V power socket, and the water dispenser starts to work. (It is recommended to tie the power cord with a strap and place it behind the water dispenser to prevent the pet from biting and winding.)

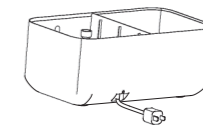

Daily maintenance of water dispenser

1. Before cleaning and maintenance, the power supply must be cut off first.
2. Filter cotton can only be cleaned with clean water, not detergent.
3. Do not clean this product with hot water, gasoline alcohol and organic solvents.
4. Clean the filter element and water pump filter cotton once a week to ensure the filtering effect.
5. Clean the inside of water tank, water pump pipe, etc. every 2 weeks, so as not to affect the product life and filtering effect.

Routine maintenance of water pump

In order to ensure the life of the water pump to continue normal use, as well as the filtering effect, or the water from the water pump becomes smaller or does not come out due to hair blockage, the water pump must be thoroughly cleaned!

1. Take out the filter sponge on the water pump;
2. Open the filter box of the water pump along the gap and remove the wheel cover of the water pump;
3. Remove the water pump impeller with tweezers.
4. Just clean each part carefully.
5. If the filter cotton of the water pump is too dirty to be cleaned, please replace it in time.

Replacement of filter element and filter cotton

1. The filter element is recommended to be replaced every 30 days.
2. It is recommended that the water pump sponge should be replaced every 30 days. If it is found that the effect of outflow water is weak, please clean it or replace the water pump sponge in time.
3. For your pet's health, please change the filter element and water pump sponge frequently according to the water quality and pet's drinking habits.

Q&A Troubleshooting

Q: Does the water dispenser consume a lot of electricity every day?

A: This machine uses an ultra-low power water pump with an average power of about 0.3W; Working continuously for one month only consumes about 1 degree of electricity, and one year consumes about 12 degrees of electricity.

Q: When do I need to add water??

A: This water dispenser has a water shortage and power failure reminder function. When the red light is on, it means that the water quantity is insufficient. Please add clean water in time. After adding water, the red light will go out and the white light will light up.

Safety warning

1. Use it in a dry indoor environment. Do not place this product at a high place.
2. When using, keep the machine horizontally, and don't tilt or knock it over.
3. Please do a good job of shielding and storing the power cord to avoid damage caused by pet biting.
4. The working voltage of this machine is DC 5V. Please don't use too high or too low working voltage.
5. Please locate the adapter higher than this machine.
6. Please do not disassemble or repair the product, or replace the parts that are not our company.
7. If children use this product, please make sure they use this machine correctly.